

configuration



Hey, thanks for joining to REBELS community! One more thing about your tool usage...

Due to new configuration process, there is unique model factor you'll need to setup (connected speaker will help you). Please follow instructions below and check FAQ on official website: scooter-unlock.eu (scooter-rebel.eu) for known model factors.

New commands introduced in your unit:

3 taps - model factor +1

4 taps - model factor -1

5 taps - dashboard factor +1

6 taps - dashboard factor -1

20 taps - save current model factor (speed/acc)

10 taps - toggle to saved model factor (ex. limited speed)

Model factors 1 to 32 (one *sound* stands from position 1)

Dashboard factors 1 to 255 (one *sound* stands from position 1)

Launch procedure:

- initiate „unlock attempt” by single long touch/press
- after *sound* and *blink*, vehicle is expecting code
- 2 touches, 5 touches, 1 touch, 2 touches - stands from "2512"
- if entered code was correct, you'll hear the *sound*
- front light will blink, dashboard and lights will turn on
- at this time, vehicle is ready to roll. Always wear a helmet!

